

TRE24 : instructions for installation and use

Thank you for having chosen an LAE electronic product. Before installing the instrument, please read this instruction booklet carefully in order to ensure maximum performance and safety.

1. INSTALLATION

- 1.1 The TRE24 has got a size of 58x34x47 mm (WxHxD). The dimensions of all details appear in figure 2. The device must scrupulously be connected as per the diagram appearing in figure 1 and/or as per the indications on the label.
- 1.2 The device should work with room temperatures between 0°C...+50°C and 15%...80% relative humidity. Please locate the device so as to avoid any contact with water or other liquids.
- 1.3 The TRE24 input is protected against polarity reversal, the output is protected against accidental short-circuits (not continuous) and overloads. Input and output are not insulated between each other.

2. TECHNICAL DATA

Power supply	16..36Vdc
Output	12Vdc
Max. current	250mA
Max. power	3W

3. WIRING DIAGRAM AND DIMENSIONS

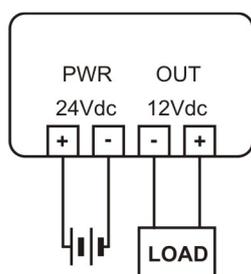


Figure 1

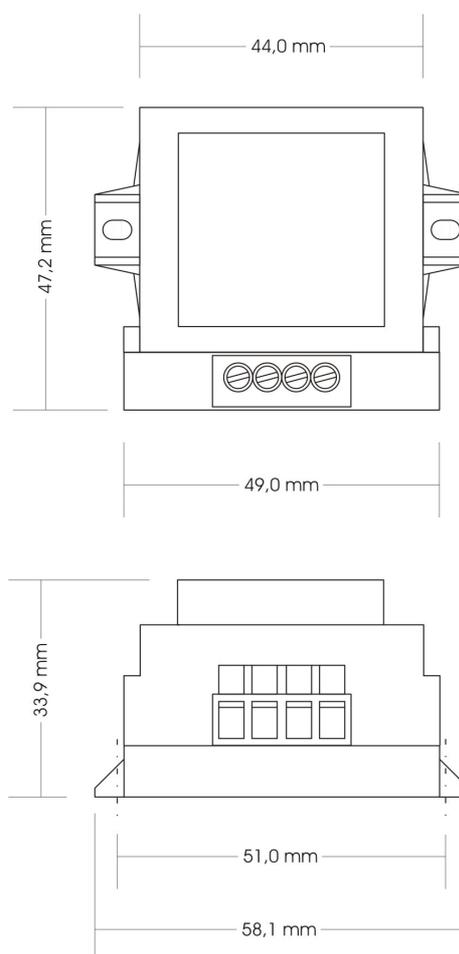


Figure 2

WARRANTY

LAE electronic Srl guarantees its products against defects due to faulty materials or workmanship for one (1) year from the date of manufacture shown on the container. The Company shall only repair or replace products which are shown to be defective to the satisfaction of its own technical services. The Company shall not be under any liability and gives no warranty in the event of defects due to exceptional conditions of use, misuse or tampering.

All carriage expenses for returning the product to the manufacturer, after having obtained the latter's permission, and for any return to the buyer shall be paid by the buyer.